

CLIO

QUICK GUIDE



WELCOME ABOARD YOUR VEHICLE

Note

Congratulations on your choice - your new vehicle has been created by RENAULT's design teams to offer you exceptional comfort and an outstanding driving experience.

In order to make your experience as pleasant as possible, we suggest you discover the main features of your new vehicle by reading this document.

This document does not replace the driver's handbook.

Please read the complete driver's handbook for more detailed information on your vehicle's equipment.


The reference guide covers all existing equipment (both standard and optional) for all models of this vehicle. Whether the equipment is fitted to the vehicle depends on the version, the options selected and the country where the vehicle is sold.

Detailed information regarding your vehicle's use, maintenance and warranty, as well as videos and simulators, are all only a click away in the e-Guide, accessible from the website www.e-guide.renault.com.

Translated from French. Copying or translating, in part or in full, is forbidden unless prior written permission has been obtained from RENAULT, 92100 Billancourt 2009.




Front and engine compartment	3
Passenger side	4
Rear seats	5
Rear of vehicle	6
Accessing the vehicle	7
Starting/Stopping the engine	8
Dashboard	9
Lighting/Wipers	11
Driving position	12
Audio system	15
Heating and air conditioning system	17
Cruise control/Speed limiter	18
Fuel	19
Gadgets	20
eco2	21

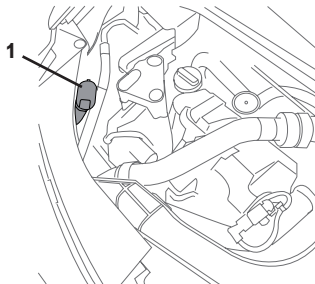


Screen washer fluid level

Add some fluid in the reservoir **1** if necessary.

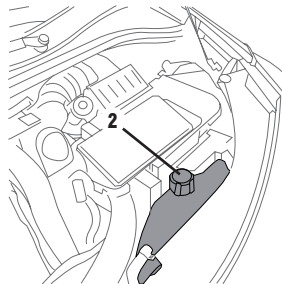

Coolant level

The level indicated on reservoir **2** should be between the **MIN** and **MAX** marks. If it is necessary to top up this level, it is essential to do so when the engine is cold.

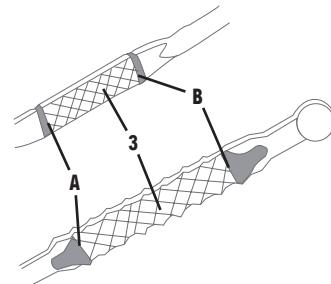


Engine oil level

To check the oil level, use dipstick **3**. The level shown on dipstick **3** should be between the **MIN A** and **MAX B** marks.

Depending on the vehicle, when the oil is at the minimum level, the message "oil" or "top up oil" is displayed on the instrument panel.

You must observe the service intervals and the standards governing the oils tested for your engine. Refer to the Maintenance Service document for your vehicle, and to Section 4 of the vehicle handbook for the precautions to take when filling with oil.



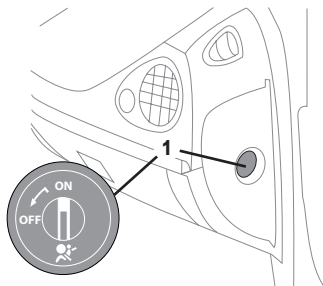

Deactivating the front passenger air bag

Depending on the vehicle, you may have a function to deactivate the passenger air bag. If you wish to fit a child seat to the front passenger seat, it is essential to deactivate the air bag: with the vehicle stationary, press and turn lock **1** to **OFF** (refer to Section 1 of your driver's handbook).


With the ignition on, the indicator light on the central display comes on.


Immediately reposition the lock to **ON** as soon as you stop using the child seat.

Activation of the front passenger air bag

You should reactivate the air bag as soon as you remove the child seat from the front passenger seat to ensure the protection of the front passenger in the event of an impact.

To reactivate the air bag: when the vehicle is stationary, press and turn lock **1** to the **ON** position. With the ignition on, you must check that the warning light is off on the central display.

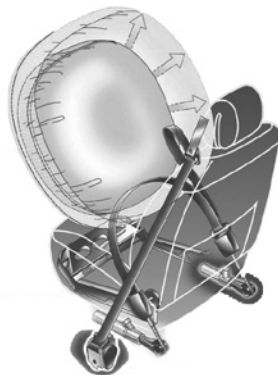

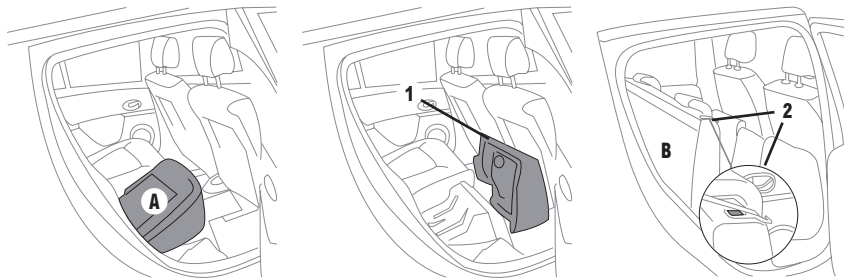

Folding away the bench seat

TO FOLD AWAY THE SEAT BASE


- Lift the front of cushion **A**.
- lift the back of cushion **A** then tilt it against the front seats.

TO FOLD DOWN THE SEATBACK

- Press button **2**;
- lower seatback **B**.

TO RAISE THE BENCH SEAT

- Check that the seat belts are correctly positioned, then lift the seatback and lock it back in place.
- lift cushion **A**, place rear section **1** under the seatback and press on the front of the cushion to lock the seat base.

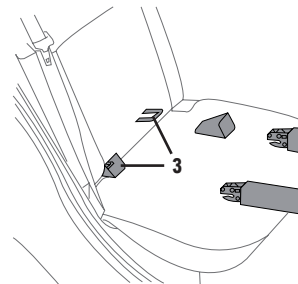


ISOFIX system

Each rear side seat is fitted with the ISOFIX child seat mounting system **3**.

Depending on the type of child seat used, installation requires specific precautions.

☑ Refer to the information on “Child safety” in Section 1 of your driver’s handbook for the special features.

Consult your RENAULT Dealer to find out about the equipment available for your vehicle.

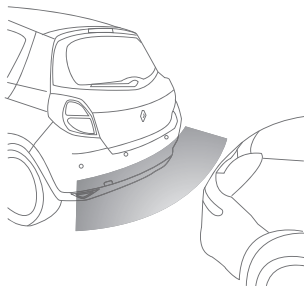


Parking distance control

On equipped vehicles, the parking distance control “measures” the distance between the rear of the vehicle and any obstacles nearby.

When approaching an obstacle during manoeuvres, the beeps become faster and then sound continuously when 25 cm from the obstacle.

You can temporarily or permanently deactivate the system using the switch located on the dashboard: refer to your Driver's Handbook.

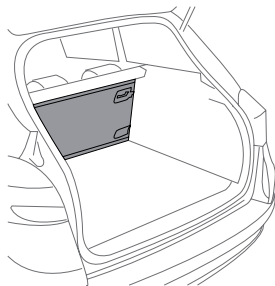

Luggage compartment


STORAGE CAPACITY

Depending on the vehicle, the storage capacity of the luggage compartment on your Clio may be adjustable.

MOBILE FLOOR

Depending on the vehicle, a mobile floor can be used to make loading easier.

☒ Refer to Section 3: “Rear parcel shelf/luggage compartment features” in your driver's handbook to store the mobile floor.

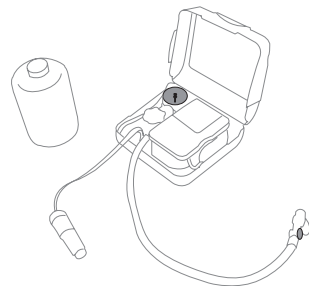

Tyre inflation kit/ Emergency spare wheel

Depending on the vehicle, in the event of a puncture, there is either a tyre inflation kit or emergency spare wheel available. To access it, lift the luggage compartment carpet.

☒ Refer to Section 5 of your driver's handbook.

Remote control key/ RENAULT card

Press:



to unlock;



to lock;



to lock/unlock the luggage compartment only.

In all situations:

- two flashes of the direction indicator lights confirm locking,
- one flash of the direction indicator lights confirms unlocking.


Special note



For vehicles equipped with deadlocking, pressing this button twice in succession prevents the doors from being unlocked, even from the inside.

Special note on switchblade key

To release the key, press button 1. It is released from the unit. To return it, push it into its housing.

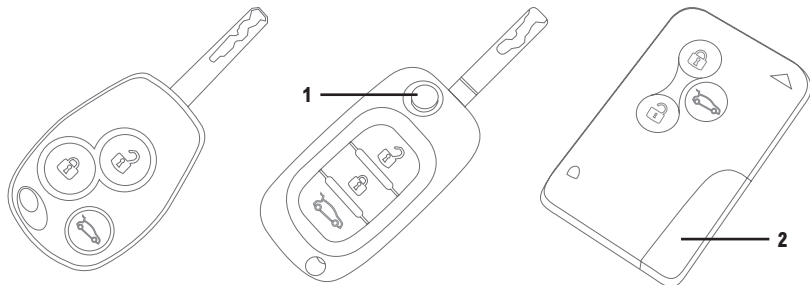

RENAULT "HANDS-FREE" CARD VERSION

The RENAULT card system replaces the traditional key. Locking/unlocking the vehicle is simple: whether from a distance or nearby, a single press is required.

Special features

The detection zone of the card, necessary for locking and unlocking the vehicle, depends on the surrounding environment or the location of the card. With the card on your person (you can leave it in your pocket, bag etc.), in addition to the remote control card functions, the following are possible:

- automatic unlocking by pulling a door handle;
- automatic locking by pressing the button on the driver's door handle.

Note: if required, you can use the manual mode or the key 2. Pull to release it.

Never leave a key or RENAULT card inside the vehicle.

Starting the engine

REMOTE CONTROL KEY

With key **1** in the ignition switch, turn it fully on. Once the engine has started, release it.

Note: on diesel versions, several seconds may pass between turning the key and the engine starting to allow for engine preheating.

Vehicle fitted with automatic transmission


Before starting, position the lever at **N** or **P**.

RENAULT CARD

With the remote control RENAULT card in reader **3** or the hands-free RENAULT card in the interior detection zone (excluding certain high locations such as the sun visor, etc.) apply the following starting conditions:

Manual gearbox

With the gear lever in neutral, press button **2**.

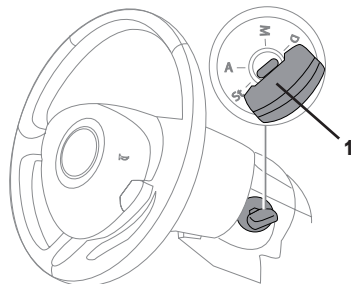

Automatic transmission

With the lever in position **P**, press button **2**.

Note: for vehicles fitted with the hands-free RENAULT card, the brake pedal must be depressed to allow the engine to be started.


Stopping the engine

REMOTE CONTROL KEY

With the vehicle stopped, turn the key towards you.

RENAULT CARD

With the vehicle stationary, press button **2**.

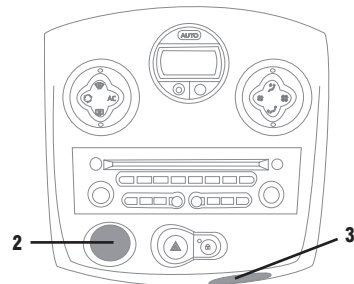


Accessing functions

Turn the key through two positions in order to access certain functions (radio, navigation, wipers etc.).

Hands-free card version

Depending on the case, these functions will switch off at the latest when the vehicle is locked.

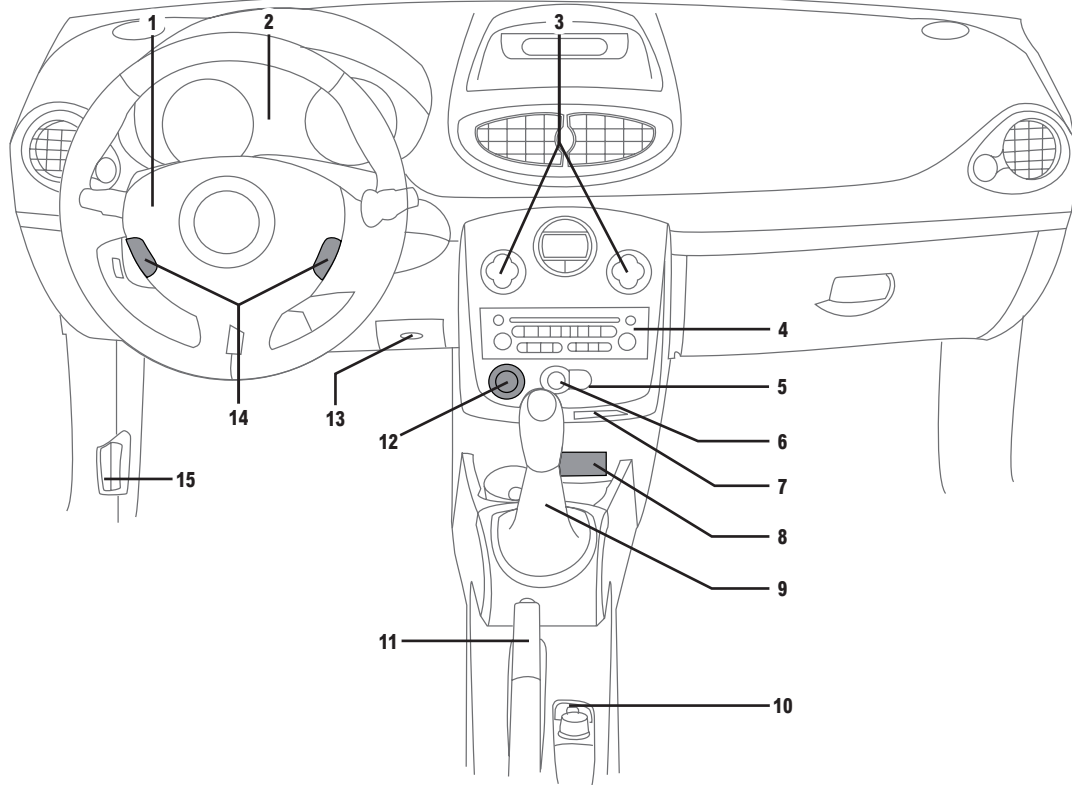

The equipment fitted, described opposite, **DEPENDS ON THE VEHICLE VERSION AND THE COUNTRY.**

1 Horn and location for driver's air bag.

2 Instrument panel.



Driver's seat belt reminder warning light.



Air bag warning light.

This comes on when the ignition is switched on and goes out after a few seconds.

If it does not come on when the ignition is switched on or if it flashes, there is a fault in the system. Contact a RENAULT Dealer as soon as possible.



Door status warning light.

– Warning lights:



This requires you to drive carefully to a RENAULT Dealer as soon as possible. If you fail to follow this recommendation, you risk damaging your vehicle.



This warning light requires you to stop immediately, for your own safety, as soon as traffic conditions allow. Stop your engine and do not restart it. Contact a RENAULT dealer.

– Distance before service:

Some vehicles are equipped with a system that analyses the quality of the oil in real time. It ensures that the engine remains reliable by adapting the engine oil change intervals to the driving style. Under certain conditions of use, the message "Service due in..." may appear before the scheduled service date. If the message "Service vehicle" is then displayed, you must arrange for the vehicle to be serviced as soon as possible.



Aiding fuel economy.

For vehicles fitted with a manual gearbox, this function indicates the best time to change gear to optimise fuel consumption.

3 Heating and ventilation controls.

4 Location for radio or storage.

5 Electric door locking/unlocking.

6 Hazard warning lights.

7 RENAULT card reader.

8 Auxiliary socket behind the cover.

9 Gear lever.

10 Cruise control/speed limiter main on/off switch.


11 Handbrake.

12 Engine start/stop button.

13 Fuse box.

14 Cruise control/speed limiter controls.

15 Bonnet release.

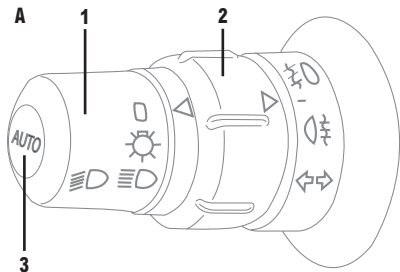

Lighting control A

Turn ring **1** on stalk **A**:



switch on the side lights;



switch on the dipped beam headlights.


Flash headlights: pull the stalk towards you.

Main beam headlights: with ring **1** in position



pull the stalk.

AUTO: to activate the automatic lights, depending on the vehicle, with the ignition on, press button **3** for 4 seconds.

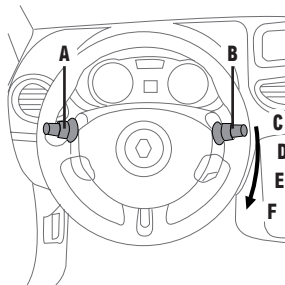

Turn ring **2** then release it to:




switch on the front fog lights;



switch on the rear fog light.

To switch off, repeat the operation.

Cornering lights: depending on the vehicle and under certain driving conditions (speed, steering wheel angle, etc.), in addition to the dipped beam headlights, cornering lights are switched on to light the inside of the bend.

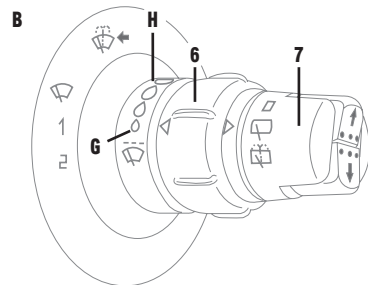

Wiper control B

Stalk **B** in position:

C: park;

D: intermittent wiping or, depending on the vehicle, automatic wiping;

Note: ring **6** can be used to adjust the sensitivity of automatic wiping, from minimum sensitivity (**G**) to maximum sensitivity (**H**).


E: normal wiping speed;

F: fast wiping speed.

Windscreen washer: pull stalk **B**;

Rear screen wiper: turn ring **7**. To stop wiping, turn ring **7** again;

Rear screen washer: turn ring **7** then release it.

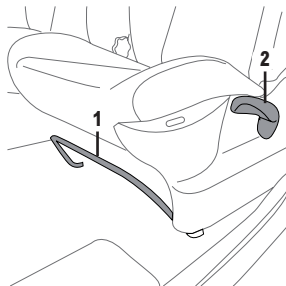

Adjusting the seats


MOVING THE SEAT FORWARDS OR BACKWARDS

Lift handle **1**, slide the seat into the desired position and release the handle. Check that it is correctly locked.

RAISING OR LOWERING THE SEAT

On equipped vehicles, move handle **2** as many times as is required:

- to raise the seat, move it upwards;
- to lower the seat, move it downwards.

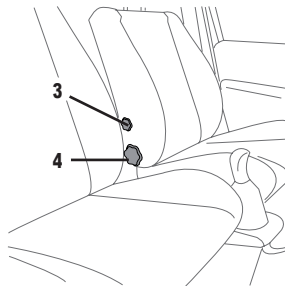


TILTING THE SEATBACK

Turn control knob **4** to tilt the seatback to the desired position.

ADJUSTING THE LUMBAR SUPPORT ON THE DRIVER'S SEAT

Turn control knob **3** to increase or decrease support.

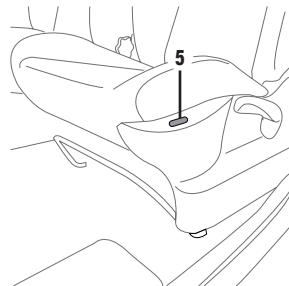


Heated seats

(depending on the vehicle)

To switch on: press button **5**. The integrated indicator light comes on.

To switch off: press switch **5** again. The integrated indicator light goes off.


The system, which has a thermostat, decides whether or not the heating is needed.

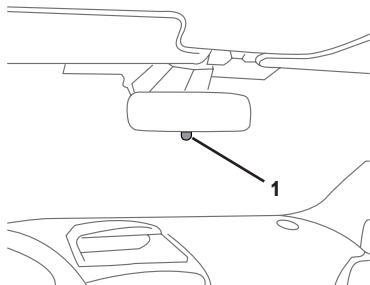

Interior rear-view mirror

Move the interior rear-view mirror to position it.


When driving at night, to avoid being dazzled by the headlights of the vehicle behind, depress small lever **1** located behind rear view mirror.

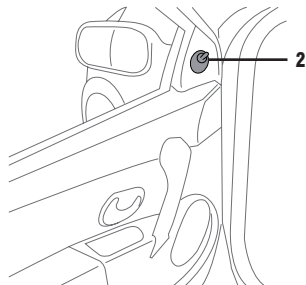

Door mirrors

MANUAL ADJUSTMENT

Turn lever **2** to adjust the door mirror.

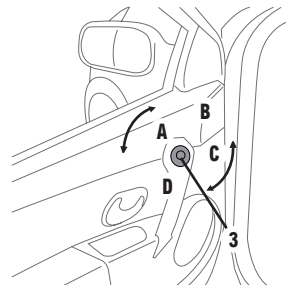

ELECTRIC DOOR MIRRORS


Move button **3**:

A: left-hand door mirror adjustment;

B: rest position;

C: right-hand door mirror adjustment;


D: door mirror fold-back (depending on the vehicle).

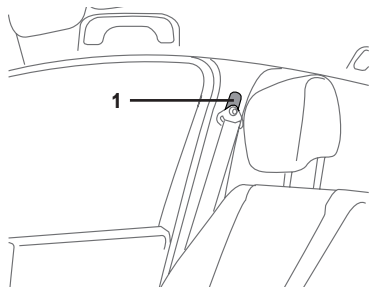

Seat belt


ADJUSTING THE HEIGHT

Tilt button **1** to adjust the seat belt to the required height.

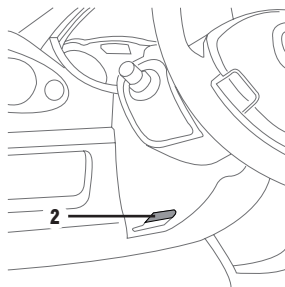

Adjusting the steering wheel height and depth

- Pull lever **2** and move the steering wheel to the desired position;
- push the lever to lock the steering wheel;
- make sure that the steering wheel is correctly locked.

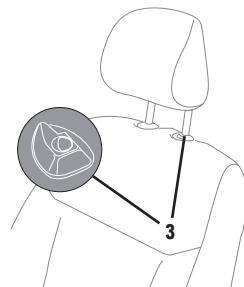




Headrest

RAISING THE HEADREST

Raise the headrest to the required height.

LOWERING THE HEADREST

Raise the headrest slightly, push tab **3** then lower the headrest to the required height.

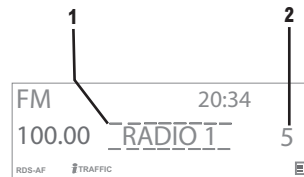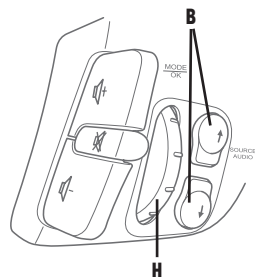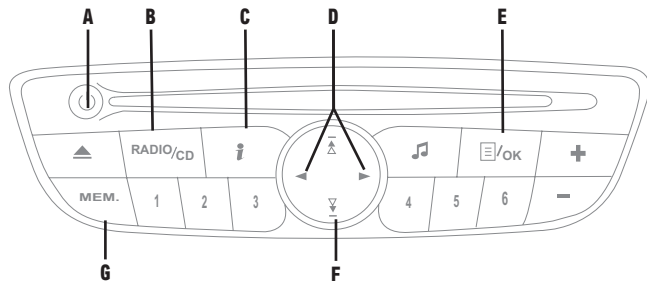

LISTENING TO THE RADIO, A CD (AUDIO AND MP3) OR A PORTABLE AUDIO PLAYER

Press **A** to switch the system on or off.

Select the desired source by pressing one of the keys **B** once or several times.

If you wish to listen to an AUXILIARY source, connect your portable audio player to the desired socket (refer to the "Dashboard" section).

FM RADIO SOURCE

To update the list of stations:

Press **C**, then **F** or turn **H** to select the "Update FM List" field and confirm by pressing **E** or **H**.

To select a radio station from a list in alphabetical order:

Press **D** to move to the station name field **1** then turn **H** or press **F** several times to scroll through the list of radio stations.

To store a station to one of the buttons numbered 1 to 6:

Select a radio station and press one of the buttons 1 to 6 until a beep sounds.




To recall a stored station, press the corresponding button.

To store up to 12 FM stations:

Select a radio station, press **G**, then use **F** or turn **H** to select a location from 1 to 12 then confirm by pressing **E** or **H**.

To recall a stored station:

Move across to the station number **2** by pressing **D**, then scroll through the radio stations using **F** or **H**.

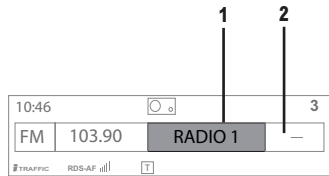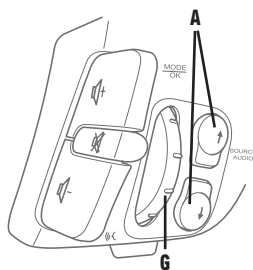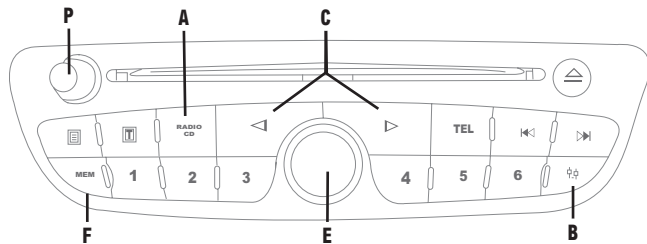

To switch the system on/off, press **P**. Adjust the volume by turning button **P**.

LISTENING TO THE RADIO, A CD OR A PORTABLE AUDIO PLAYER

Select the desired source by pressing one of the buttons **A** once or more.

If you wish to listen to an **AUXILIARY** source, connect your portable audio player to the desired socket (refer to the “Dashboard” section for its location).

FM RADIO SOURCE

To select a radio station from a list in alphabetical order:

Press **C** to move to the station name field **1** then turn **E** or **G** to scroll through the list of radio stations.

To update the list:

Press **B**, then turn **E** or **G** to select the “Audio settings” field then “Radio functions” and “Update FM list”; confirm by pressing **E** or **G**.

To store a station from 1 to 6:


Select a radio station then press one of the buttons 1 to 6 until a beep sounds.

To recall a stored station, press the corresponding button.

Button **F** is used to store up to 12 stations (refer to the previous page).


Pairing your Bluetooth® device

In order to use your hands-free device (telephone, portable audio player), you must pair it when using it for the first time. After this, it will be recognised and automatically connected to the hands-free system once the vehicle ignition is switched on. Refer to the “Bluetooth® connection” section in the reference guide.

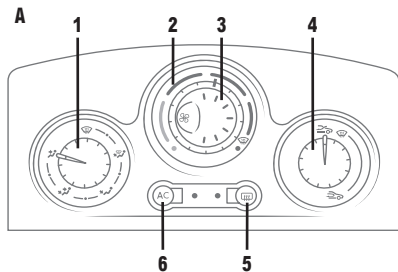

Manual air conditioning A

- Turn control **1** to select one of the 5 air distribution positions;
- turn control **2** to select the temperature;
- turn control **3** to adjust the ventilation speed;
- turn control **4** to recirculate the air;
- press button **5** to activate de-icing of the rear screen and, depending on the vehicle, the door mirrors;
- press button **6** for air conditioning.

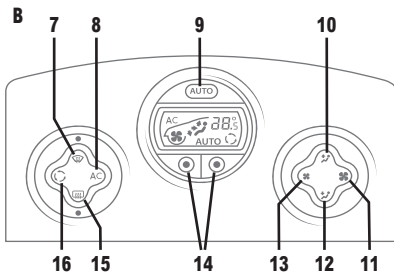

Automatic climate control B

ACTIVATING AUTOMATIC MODE

- select the required temperature using buttons **14**;
- press button **9** for automatic mode to control the system.

Note: pressing button **8** forces the air conditioning. The AC indicator light comes on. When button **8** is pressed again, the air conditioning is automatically controlled by the system.

AIR RECIRCULATION

Press button **16** to recirculate the air.

ADJUSTING THE AIR DISTRIBUTION

Press button **10** or **12** to select the desired position.


ADJUSTING THE VENTILATION SPEED

Press button **11** or **13** to increase or decrease the air flow.

DEMISTING/DE-ICING

Press button **7** to activate demisting and de-icing of the windscreen, front side windows and door mirrors.

Press button **15** to activate demisting/de-icing of the rear screen and/or door mirrors.

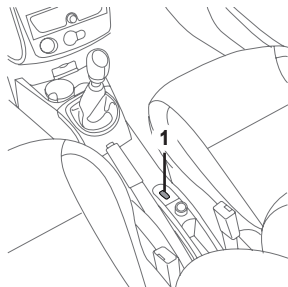

Cruise control/speed limiter




The cruise control is a function which helps you to keep your driving speed at a constant value.



The speed limiter function helps you stay within the driving speed limit.


If fitted to the vehicle, select the cruise control or speed limiter by moving switch **1**.

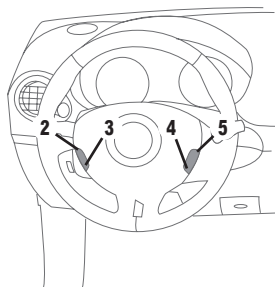

Cruise control/speed limiter controls

- Main On/Off switch **1**.
- Activation, storage and increase switch for the programmed speed: button **2 (+)**;
- Activation, storage and decrease switch for the programmed speed: button **3 (-)**;
- Programmed speed storage function standby: button **4 (0)**;
- Activation, storage and recall switch for the programmed speed: button **5 (R)**

To use the cruise control/speed limiter, refer to Section 2 of your driver's handbook.

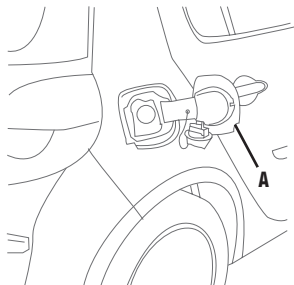

Fuel tank

Your vehicle is fitted with a fuel filler flap.


- To open the flap, place your finger in recess **A** and pull.
- Insert the filler nozzle.

Note: if the flap does not open, ensure that the vehicle is unlocked

The fuel tank capacity is **approximately 55 litres.**


If the low fuel level warning light comes on when driving, fill the tank as soon as possible. You will be able to drive a further 30 miles (50 km) (approximately) before the tank must be refilled.



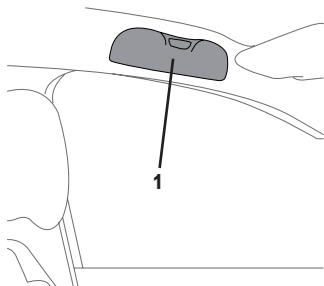

Sunglasses holder


The sunglasses holder **1** is located on the driver's side.

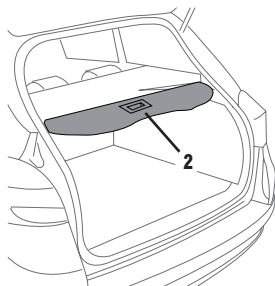

Luggage cover

On equipped vehicles, luggage compartment cover **2** comprises a rigid section and a flexible section.

To roll it up or unroll it, refer to the information on the "Luggage compartment cover" in Section 3 of your driver's handbook.

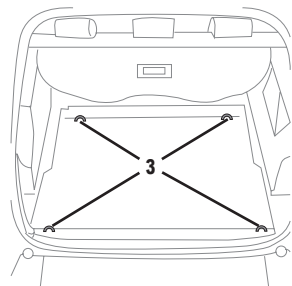

Luggage net

Depending on the vehicle, a luggage net is fitted to secure items transported on the luggage compartment floor.

The net is located under the passenger seat and fixes to anchorage points **3**.

Do not place any heavy or hard objects on the luggage cover. These may pose a risk to the vehicle occupants if the driver has to brake suddenly or if the vehicle is involved in an accident.



When using your vehicle, adopt an economical driving style. These driving guidelines will help you to consume less fuel.

Six pieces of everyday practical advice for fuel savings of 10% to 20%.

1 ADAPT THE GEAR CHANGES

- Change up a gear from 2000 rpm in Diesel vehicles and 2400 rpm in Petrol vehicles;
- change down a gear from 1000 rpm;
- at a stable speed or for gentle acceleration, use the top gear.

2 DRIVE FLEXIBLY

- Anticipate the traffic conditions so as to use engine braking more than the brake pedal;
- above 30 mph (50 km/h), maintain a steady speed.

3 CONTROL ACCELERATION AND SPEED

- Up to 30 mph (50 km/h), accelerate so that 5th can be quickly reached;
- beyond 30 mph (50 km/h), accelerate moderately and limit the speed.

4 MANAGE UPHILL AND DOWNHILL SECTIONS

- When driving downhill, maintain the driving speed;
- when driving uphill, slow down without affecting the traffic flow.

5 USE THE ENGINE CONSCIENTIOUSLY

- Switch off the engine if stopped for more than 30 seconds;
- do not run the engine at idle speed (to raise the temperature) before driving, even in winter.

6 OPTIMISE YOUR USE OF THE VEHICLE

- Use the heating and air conditioning system only when necessary;
- limit the difference between the interior and exterior temperature to 5°C;
- check the tyre pressures every month;
- do not leave unnecessary loads in the vehicle.

(www.e-guide.renault.com)



8 2 0 1 0 2 5 3 9 4

7A